

GC-BF-430 (RS232/485) GC-BF-431 (RS232/422)

ETHERNET CONVERTER

Quick Start Guide



1. Setting up Your IP Address


Use this section to set up your computer to assign it a static IP address in the 192.168.168.1 to 192.168.168.254 (except for 192.168.168.125) range with a subnet mask of 255.255.255.0. This is necessary to ensure that your computer can communicate with your BF-430/BF-431.

Your computer must have an Ethernet card and TCP/IP installed. TCP/IP should already be installed on computer using Windows 98/2000/XP and later operating systems.

Note: Connect a computer to BF-430/BF-431 Ethernet port directly should be with crossover Ethernet cable, if both connect to hub/switch should be with straight-through Ethernet cable.

1.1 Using IP Search Utility to set BF430/BF431's IP Addresses

1. Install IP Search utility on your computer and execute **ipsearch.exe**.
2. Clicks **Refresh** to find the IP address of your BF430/BF-431.
3. If the current setting of IP address is not in same sub network with yours, then you can change BF430/BF-431's IP address and Subnet Mask by click **Alter**.

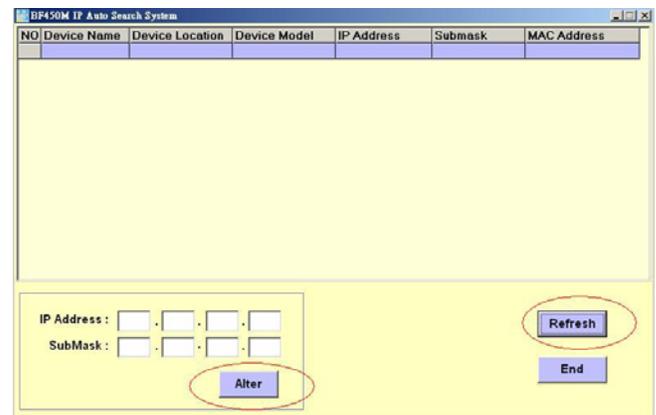

2. Configure BF-430/BF-431

1. Open your web browser and type <http://192.168.168.125> in the browser's address box. This address is the factory set IP Address of your BF-430/BF-431. Press "Enter".
2. The "Username and Password required" prompt box will appear. Typing "admin" (default username) in the Username field and typing "admin" (default password) in the Password field. Click "OK". The setup screen will then appear.
3. It is highly recommended you change the default username and password when you login successfully first time.

TROUBLESHOOTING SUGGESTIONS

None of the LEDs turn on when you turn on the BF-430 / BF-431	Make sure that you have correct power connected to BF-430 / BF-431 and plugged in to an appropriate power source. Check all cables connections. If the LEDs still do not turn on, you may have a hardware problem. In this case, you should contact your local vendor.
Can not access BF-430 / BF-431 from Ethernet	Check cable connection between BF-430 / BF-431 and computer or hub. Ping BF-430 / BF-431 from computer. Make sure your computer Ethernet card is installed and functioning properly.
Can not ping any computer on the LAN	If the 10/100M LED are off, check the cable connection between BF-430 / BF-431 and your computer. Verify that the IP address and subnet mask of the BF-430 / BF-431 and computer are in the same IP address range.
Can not access BF-430 / BF-431 from Serial	Check the Serial cable connection between BF-430 / BF-431 and your device. Verify that the BF-430 / BF-431 setting of Serial type is same as your device and make sure the hardware jumper is in the correction position.

DEFAULT SETTINGS

Serial Working Mode	Default Value
Acting Role	TCP Server
Listen Port Number	50000
Idle Timeout to Close Connection	300 seconds
Access Password	NULL
IP Configuration	Default Value
IP Mode	Static IP
IP Address	192.168.168.125
Subnet Mask	255.255.255.0
Default Gateway	192.168.168.254
Primary DNS	168.95.1.1
Serial Configuration	Default Value
Serial Type	RS232
Baud Rate	115200
Parity Check	None
Data Bits	8
Stop Bits	1
Flow Control	None
Force Transmission Time	40 ms
Dynamic DNS	Default Value
DDNS Service	Disable
Device Administration	Default
Block Http Standard Port 80	UNBlock
Manage IP Address	192.168.200.200
Device Name	"CHIYU"
Device Location	null
Login Username	"admin"
Login Password	"admin"
Block Ping Request	Unblock
Diagnostic PING	Default Value
PING Packet Numbers	4
PING Packet Length	60 Bytes